

Operation instructions

1 Product Name

- 1.1 The middle install intelligent LCD Display
- 1.2 Model : C965A

2 Suppliers

- 2.1 www.szbaif.com

3 Electrical Parameters

- 3.1 24V/36V battery supply (48V optional)
- 3.2 Rated operating current :10mA
- 3.3 Max operating current ;30mA
- 3.4 Off leakage current <1uA
- 3.5 Max output current to controller : 50mA
- 3.6 Operating temperature: -20~70°C
- 3.7 Storage temperature: -30~80°C


4 Dimensions & Material

- 4.1 Product shell is ABS, transparent windows is made with high strength Acrylic, the stiffness equals the tempered glass
- 4.2 Dimensions :host/L90mm*W54mm*H13.3mm




5 Features

- 5.1 Ergonomic external button design, easy to operate
 - 5.2 Speed display: AVG SPEED, MAX SPEED, SPEED (Real-time)
 - 5.3 Kilometer/Mile: can be set according to customers' habits
 - 5.4 Battery indicator
 - 5.5 The brightness of the backlight adjustable: 5-sections
 - 5.6 9-level Assist: 3-level/5-level/9-level, optional
 - 5.7 Mileage indicator: Odometer/Trip distance/Riding time
 - 5.8 Error code indicator
 - 5.9 Parameter settings: Multiple parameter can be set through computer USB port, including assist level numbers/Wheel diameter/Speed limit....
- ## 6 LCD instructions
- The figure of LCD display see below:

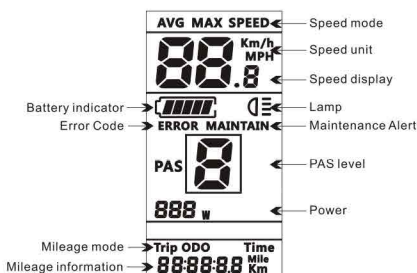

7 Functional Description

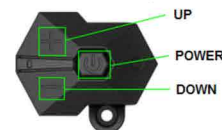


7.1 Power On/Off

Press and hold **Power** button for 1 second can on/off the display. The Display can automatically shut down when there is no operate & ride for n minutes (n could be 0~9)

7.2 Assist level operating


Short press **UP/DOWN** button can change the assist level, 0 for neutral. level quantities can be adjusted according to the customer requirements.

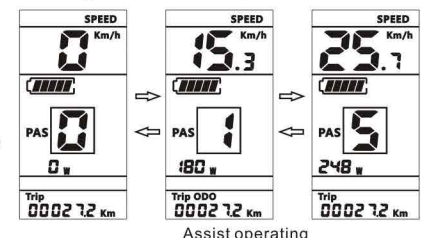

Assist operating

7.3 Speed mode switch & Mileage mode switch


short press **POWER** button can change the speed mode & the mileage mode, Trip->Time->ODO->AVG Speed->MAX Speed

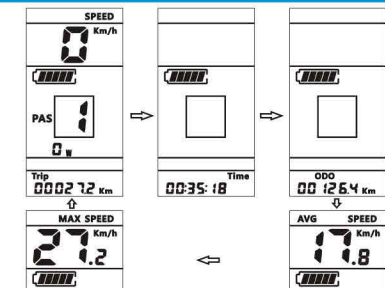

*If there is no operation for 5 seconds, display will return Speed (Real-Time) display automatically.

7.4 Headlight/backlight On/Off


Press and hold **UP** button for 1 second can turn on/off the headlight/backlight
The motor does not work when the battery voltage is low. Display still can keep the headlight on for a while when E-bike is in riding.

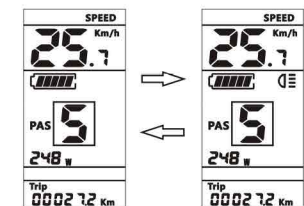

Operation instructions


7.5 6Km walk

Press and hold **DOWN** button for 1 second can get into walking mode, out of the mode when release the button

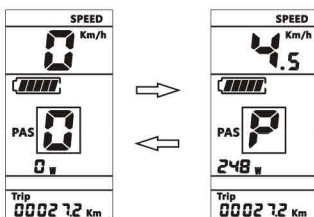

7.6 Battery indicator


Provide battery indicator. When the battery indicator shows under voltage, the battery needs to be charged

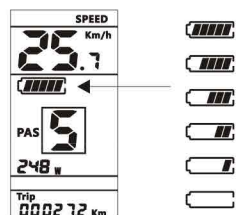

8 Basic Parameter setting


Press and hold **UP & DOWN** buttons together for 1 second can get into the Basic Parameter state, the parameter twinkles. The display will automatically quit the parameter setting state when there is no operation for 10 seconds.

 The order of Basic parameters are as follows.



8.1 Data clean up


The location of speed displays symbol **IC**, press **UP/DOWN** button rotate display the symbol **N/Y,N**: not need to be cleared, Y: needs to be cleared.

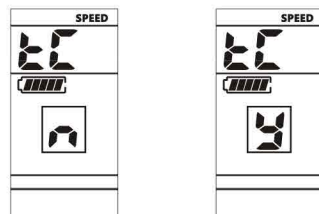

*Cleanup the several temporary data, the temporary date include AVG Speed/MAX Speed/Trip/Time.


8.2 Backlight brightness

The location of speed displays symbol **BL1**, press **UP/DOWN** button display symbol **1~5** to change the brightness of the backlight. The default value is 3.

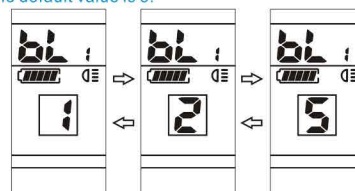


8.3 Kilometer / Mile

The location of speed displays symbol **S7**, press **UP/DOWN** button rotate display the symbol **km/h / MPH (Km/Mile)**

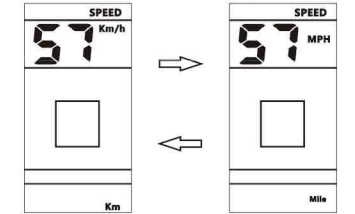


8.4 Auto off time

The location of speed display symbol **OFF**, press **UP/DOWN** button to change the value from **1 to 9**, the number represent delay time (minutes) before display shutdown automatically, default value is 5 minutes.

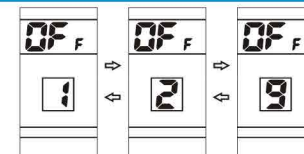


8.5 Power display

The location of speed display symbol **POd**, press **UP/DOWN** button display symbol **0/1**, represent whether to show the power indicate on LCD. 0 indicates Power display off, 1 indicates Power display on.

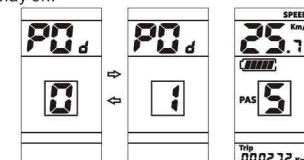

8.6 Maintain remind (Optional)

The location of speed display symbol **nnA(ma)**, press **UP/DOWN** button rotate display symbol **0/1**, 0 represent maintain reminding off, 1 represent maintain reminding on.

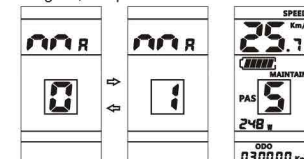

* The display can remind maintain information, according to mileage (ODO). Display will display symbol **MAINTAIN** when the ODO accumulated more than setting mileage (this parameter can be set by dealers), the mileage symbol will flash for 4 seconds when the display power on.

9 Password Parameter setting

Press and hold **UP & DOWN** buttons together for 1 second can get into the Basic Parameter state, then press and hold **UP & DOWN** buttons together for 1 second again can get into the Password Parameter setting.

9.1 Password

The location of speed displays symbol **PSD**, require to input passwords, press **UP/DOWN** buttons to change the password value (0~9), short press **POWER** button to switch the password item, password is 4 digits, the default password is "0512". Press **POWER** button when password adjustment is completed. Display will return Speed (Real-Time) display automatically if the password is incorrect. Correct password will enter the Wheel diameters set item.

